 
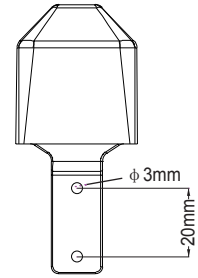 
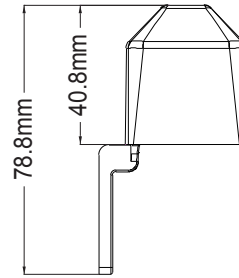 
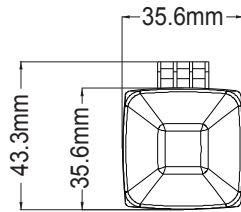 


## LX-P09 Light-Control Sensor Instruction

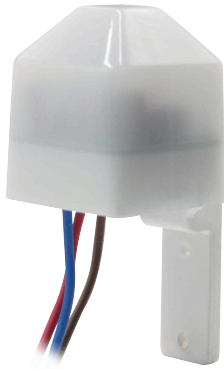

### Summary

The light-control switch can turn on and turn off light automatically according to ambient light; it is not affected by ambient temperature and humidity; It is not only convenient but also practical; it can control the load that works at night.

### Specifications

Power Source: 220-240VAC

Power frequently: 50Hz

Rated Current: 6A(pure resistance load)

Light-control: Load on < 10LUX

Load off > 30LUX

### Test

1. Use opaque to cover the sense-light window when testing in the daytime.
2. When cover this opaque, the load will be on .
3. When take off this opaque, the load will be off.
4. Take off this opaque after testing.

 
### Notice

1. In front of the light-control switch there should be no block affecting it to receive natural light;
2. In front of the light-control switch there should be no swaying object;
3. Avoid installing the unit below light.



### Connection-wire diagram

Connect blue and brown with power


Connect blue and red with load

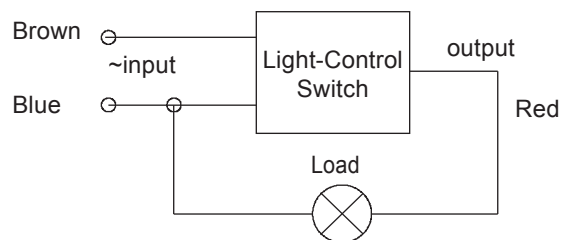

### Installation

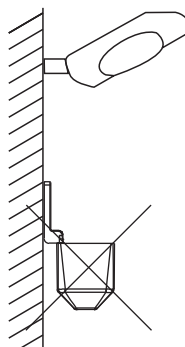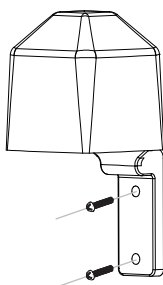  

Wrong installation

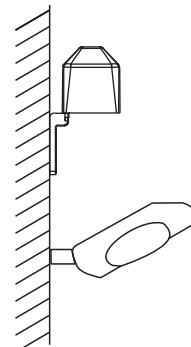 

Correct installation