

Lights and lanterns base: LED Mounting holes Mounting holes Threading hole Mounting holes Wiring Warning!

1. The LEDS in serial can function when all the seals installed

2.Please don't remove or connect with other lamp when powered on.

3.When the LEDS in serial are damaged ,you need experienced technician to repair using the same rating LEDS.

Please confirm with profession installation.

• Please cut off power supply before installation and removal operations.

• Make sure that you have cut off the power for safety purposes.

• Improper operation caused losses, the manufacturer does not undertake any responsibility.