


# LX-MV-360S15B-Z Microwave Sensor Instruction

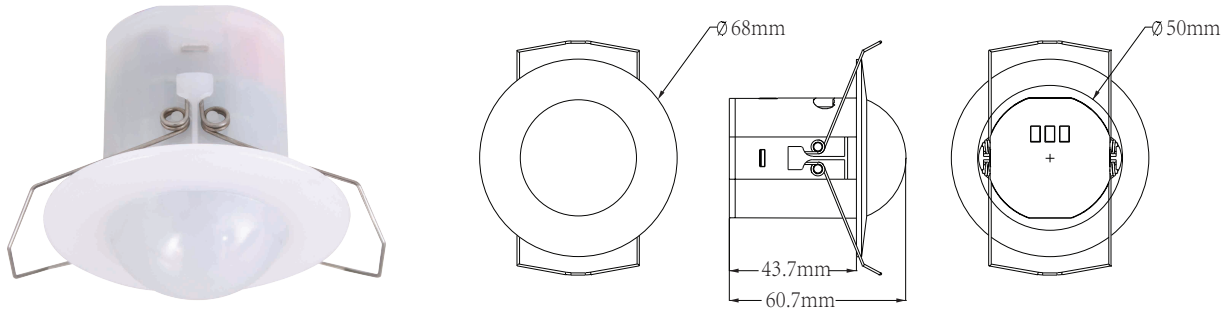

## Summary

This is a hi-precision digital microwave sensor whose detection range is 360° and working frequency is 5.8GHz. It is based on Doppler principle which integrates the emitting and receiving. It adopts MCU (Micro Control Unit) that greatly increases its precision and decreases its fault rate. It's delicate in appearance and compact in structure. It can be independently connected to the loads or easily installed inside the lightings with lampshade made of glass or plastic. It is widely applied in the passageway, washroom, elevator, household or other public areas for security protection or energy saving. It applies for several technical patents and is the perfect choice for your intelligent living.

## Features

1. Non-radiation harm: its transmitter power is lower than 0.3mW, which does no harm to human body.
2. Reliable & Stable performance: it applies the RC filtering and digital filtering in digital processing. It also uses the digital zero trigger technology, that is, at zero point it will be auto-connected or auto-disconnected. It uses the Tyco high-power relay to control output, which ensures its reliable performance. It adopts power management chip to guarantee its stable performance in 100-240VAC.

## Specifications

Power source: 100-240VAC

Power frequency: 50/60Hz

Rated load: 3000W Max. tungsten (220-240VAC)  
1000W Max. fluorescent & LED (220-240VAC)  
1500W Max. tungsten (100-130VAC)  
750W Max. fluorescent & LED (100-130VAC)

Transmission power: <0.2mW

Working temperature: -15°C~+70°C

Protection level: IP20, Class II

Time setting: 8sec to 12min (adjustable)

Detection angle: 360° (Ceiling installation),  
180° (Wall installation)


Detection range: 2-10m (radial) (adjustable)  
(Ceiling installation)  
25m Max. (radial) (adjustable)  
(Wall installation)

Light control: 2-2000LUX (adjustable)


Installation site: indoors, ceiling mounting

HF system: 5.8GHz CW electric wave, ISM band


## Sensor information

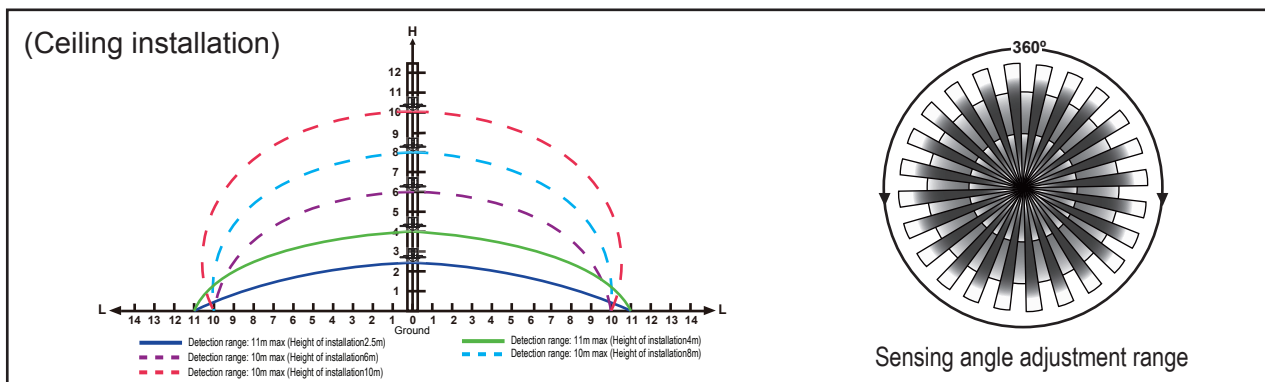


(Wall installation)

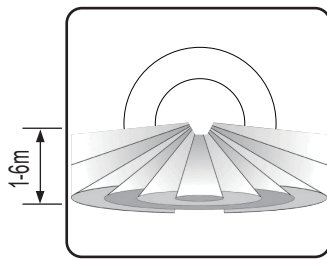

Height of installation 1-6M

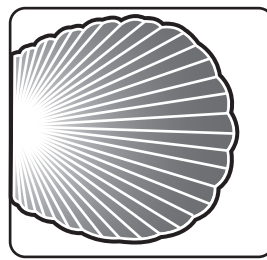

25m Max.  
Correct moving orientation


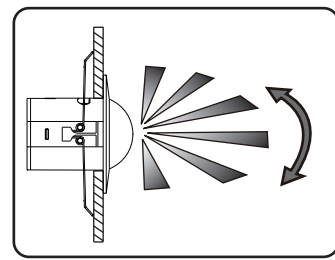


180°  
Detection angle

## Applications

Microwave can penetrate the glass, plastic and wood, thus the microwave sensor can be installed inside the shade made of certain thickness of glass, plastic or wood. For example, the application in lightings, only if making connection as below shown can you change the common lightings into auto-sensing lightings.

Connect N, L with power;  
Connect N, L' with load.

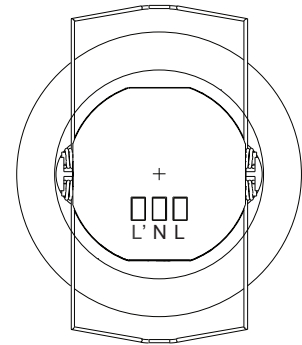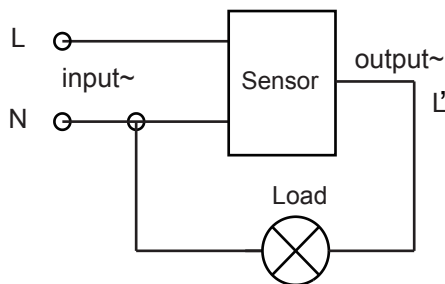

### Warning!

Microwave will be reflected by the metal, thus the microwave sensor cannot be installed inside the shade made of metal, or it won't work normally.



Nonmetals



When installed inside the ceiling or floor, the microwave sensor fails to distinguish the ambient light intensity automatically.

You can install one or more inside the ceiling or floor to control the whole passageway.


**Friendly reminder: when installing two or more microwaves together, you are required to keep 4 meters one from another, otherwise the interference among them will lead to error reaction.**

## Setting manner one: potentiometer

It may take times to adjust values before they satisfy your need.

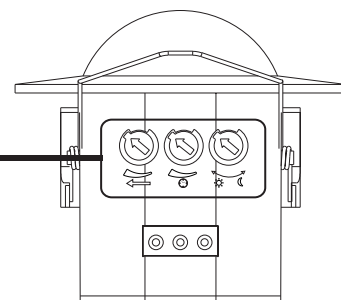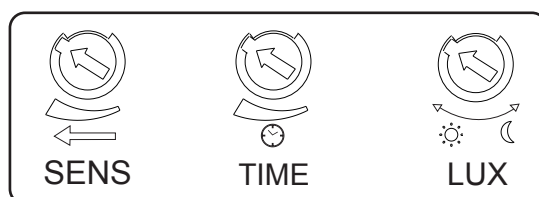

## Detection range setting(sensitivity)

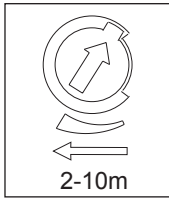

Detection range is the term used to describe the radii of the roughly circle casting on the ground when installed at the height of 2.5 m. To turn the knob fully anti-clockwise is the minimum range, fully clockwise is the maximum.

**Note:** the above detection range is gained in the case of a person who is between 1.6m~1.7m tall with middle figure and moves at a speed of 1.0~1.5m/sec. if person's stature, figure and moving speed change, the detection range will also change.

**Notice:** when using this product, please adjust the sensitivity (detection range) to an appropriate value but the maximum to avoid the abnormal reaction caused by the easy detection of the wrong motion by the blowing leaves & curtains, small animals or the interference of power grid & electrical equipment. All the above mentioned will lead to the error reaction. When the product does not work normally, please try to lower the sensitivity appropriately, and then test it. Human movement will cause the sensor induction, so when you under the function testing, please leave the induction region and don't make movement to prevent the sensor continuous work.

**Friendly reminder:** when installing two or more microwaves together, you are required to keep 4 meters one from another, otherwise the interference among them will lead to error reaction.

## Time setting



It can be defined from 8 seconds (turn fully anti-clockwise) to 12 minutes (turn fully clockwise). Any movement detected before this time elapses will re-start the timer. It is recommended to select the shortest time for adjusting the detection range and for performing the walk test.

**NOTE:** When the light is auto off, it will take 1 second before the sensor is ready to detect another movement, that is, only signal detected 1 second later can the light be auto-on.

It is mainly for the adjustment of the delay time from the moment the signal detected and light auto-on till the light auto-off. You can define the delay time to your practical need. But you'd better lower the delay time for the sake of energy saving, since the microwave sensor has the function of continuous sensing, that is, any movement detected before the delay time elapses will re-start the timer and the light will keep on only if there is human in the detection range.

## Light-control setting




It can be defined in the range of 2~2000 LUX. To turn the knob fully anti-clockwise is about 2 lux, fully clockwise is about 2000 lux. When adjusting the detection zone and performing the walk test in daylight, you should turn the knob fully clockwise.

**Note:** please don't adjust the three functional knobs to excess. That is because the three functional knobs were connected to the components directly, there is a small stopper in each of the three components, when you adjust the knobs from start to end, the excessive turn will damage the stopper, and lead to the 360° non-stop turn around. The adjust range limit is 270°, please do pay attention to this.

## Installation

- Switch off the power.
- Set threaded tubes into the power cord and control line.
- Connect the power and the load with the sensor according to the connection-line diagram.
- Turn the knobs to the ideal conditions  
(Please define the settings as per the above SETTING MANNER ONE part mentioned.).

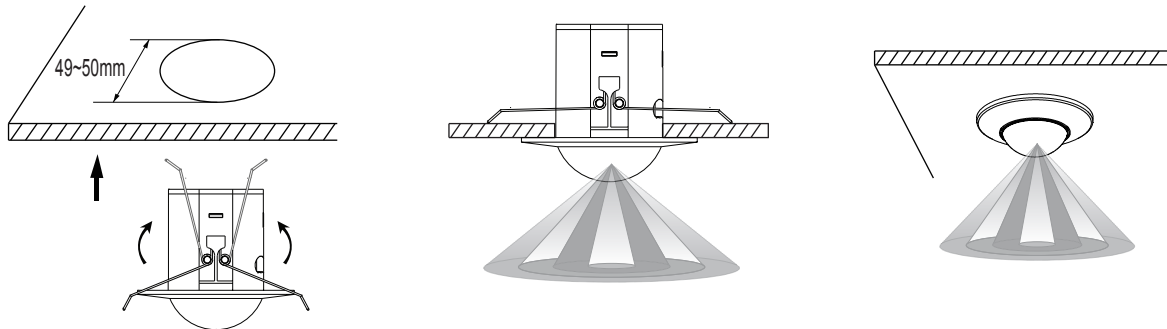

**! Warning!** The following situations will lead to error reaction.

- 1、Being installed on the rocking object will lead to error reaction.
- 2、The shaking curtain blown by wind will lead to error reaction. Please select the suitable place to install.
- 3、Being installed where the traffic is busy will lead to error reaction.
- 4、The sparks produced by some equipment nearby will lead to error reaction.

## Fault and the solution

Fault	Failure cause	Solution
The load fails to work.	Light-illumination is set incorrectly.	Adjust the setting of the load.
	The load is broken.	Change the load.
	The power is off.	Turn the power on.
The load works all the time.	There is a continuous signal in the region of the detection.	Check the settings of the detection area.
The load works when there is no motion signal detected.	The lamp isn't installed well so that sensor fails to detect reliable signals.	Re-adjust the installation place.
	Moving signal is detected by the sensor (movement behind the wall, the movement of small objects, etc.)	Check the settings of the detection area.
The load fails to work when there is motion signal detected.	The motion speed is too fast or the defined detection area is too small.	Check the settings of the detection area.

**! Warning!**

- Please confirm with professional installation.
- For safety purposes, please cut off power before installation and removal operations.
- Any losses caused by improper operation, the manufacturer does not undertake any responsibility.

We are committed to promoting the product quality and reliability, however, all the electronic components have certain probabilities to become ineffective, which will cause some troubles. When designing, we have paid attention to redundant designs and adopted safety quota to avoid any troubles.

This instruction, without our permission, should not be copied for any other purposes.